

Genuine Accessories



Vehicle Model MULTIPLE

Model Year 2017-

Part No. D2F29 AU000

Language English

Rev. Date 8/10/2016

Accessory: Door Handle Pocket Applique

Difficulty: (B)

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory:

- (A) Customer
- (B) Dealer Technician
- (C) Master Technician or Specialist

Instructional Symbols / Definitions

	Denotes warnings that may lead to serious physical injury or vehicle damage		Denotes quality processes to be checked prior to moving to the next step	Denotes personal protective equipment (PPEs) that may be required for a step. Examples of safety equipment icons noted below:	
	Denotes cautions to be taken to avoid physical injury or electronic component damage		Denotes specific tools that are necessary to complete a step		
	Denotes cautions to be taken to avoid vehicle and component damage	N O T E	Denotes important information to be reviewed during the step		
				Glasses	Gloves
				Mask	Hearing Protection

Basic Required Tools

50/50 Isopropyl Alcohol (70%) & Water (Cleaning Solution)	Alcohol, Soap & Water (SLIP Mixture)	Microfiber Cloth

Part Weight (Gross)

0.015	lbs
0.007	kg

FMVSS 110 Compliance Information

All dealers must determine if the weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.


Load Label Part Number: NP070 - 09003

Notes to the installer:

- 1 Read the entire Installation Instructions prior to beginning the installation of the part.
- 2 Make sure the vehicle is completely clean and dry in the area(s) the part is to be installed.
- 3 Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 4 NEVER place tools on painted surfaces, seating surfaces, dash pad, console or floor carpet/mats.
- 5 Always wear appropriate personal protective equipment, including gloves, safety glasses, etc., when required.
- 6 Alcohol, Shampoo & Water mixture: Mix 8 oz. of water, 8 oz. alcohol (70% isopropyl) & 1 ml of baby shampoo in a trigger type spray bottle marked "SLIP". Cleaning solution: 50/50 Isopropyl Alcohol (70%) & Water.
Note: The above listed solution has been formulated for use where ambient & vehicle surface temperatures are within a range of 65°F to 90°F. If temperatures exceed this range, add additional shampoo in increments of 1 ml to aid in alignment.
- 7 Install this product while observing all warnings and precautions stated in these installation instructions.
- 8 VERY IMPORTANT: Thoroughly clean door handle pocket area with cleaning solution. If contaminants are found, clean with an automotive grade clay bar (follow instructions provided with clay bar).
- 9 VERY IMPORTANT: Ambient temperature of the Door Handle Pocket Applique and vehicle must be 65°F to 90°F at the time of installation and for two hours after.
- 10 Parts storage should be at room temperature and in a clean dry place. Care should be taken to avoid a dusty environment.
- 11 Place a large towel or pad on the ground to catch wetting mixture and avoid slippery floor.






Genuine Accessories


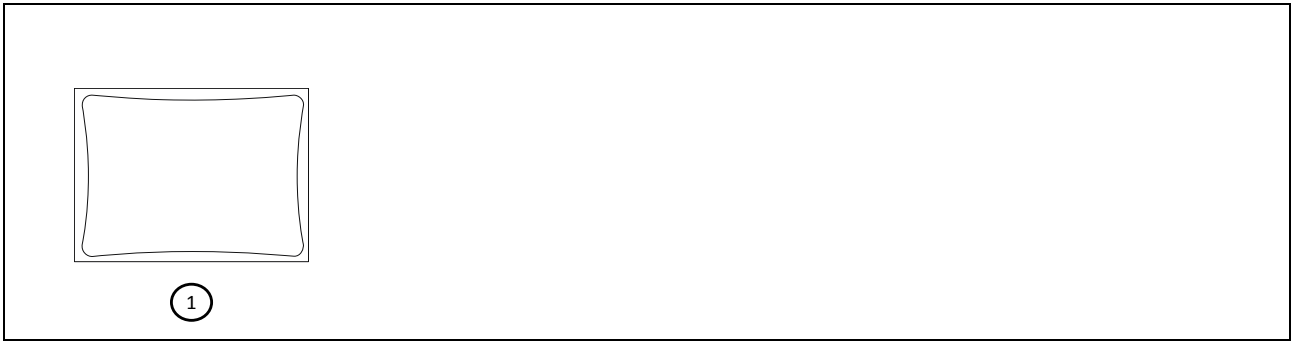


Kit Overview





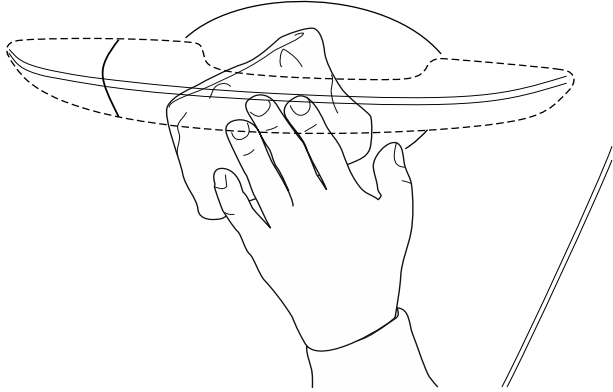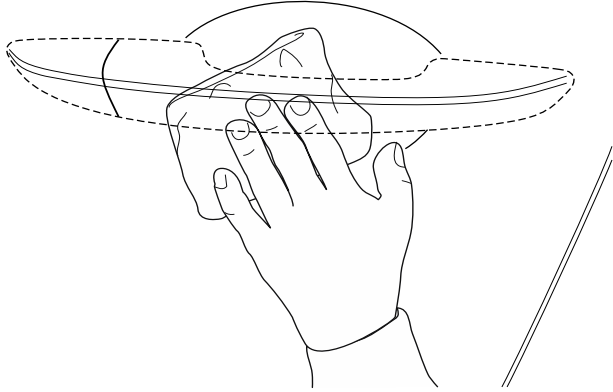

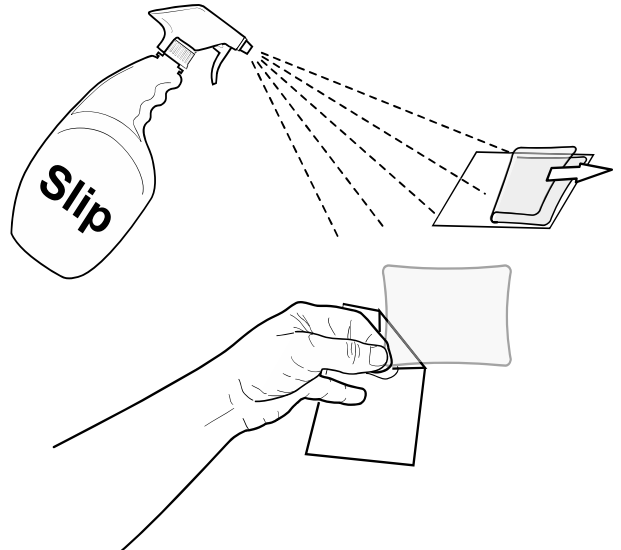
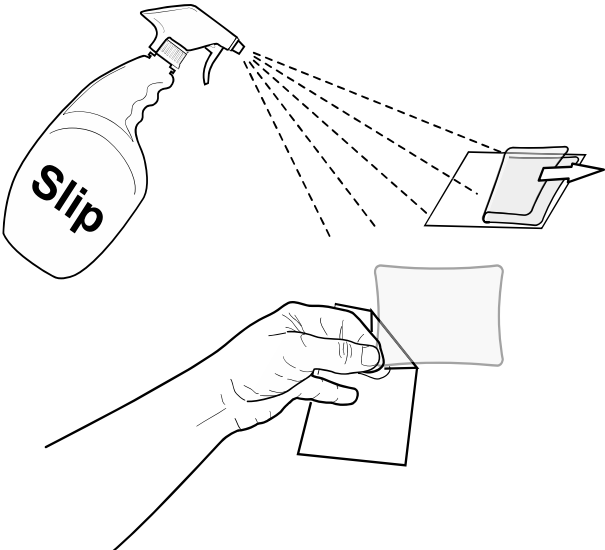


No.	Qty	Description
1	4	Door Handle Pocket Applique

Genuine Accessories

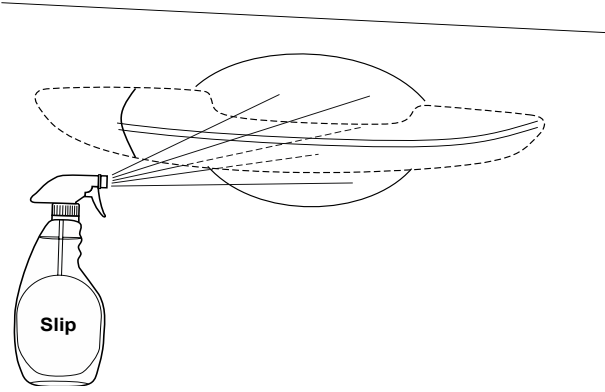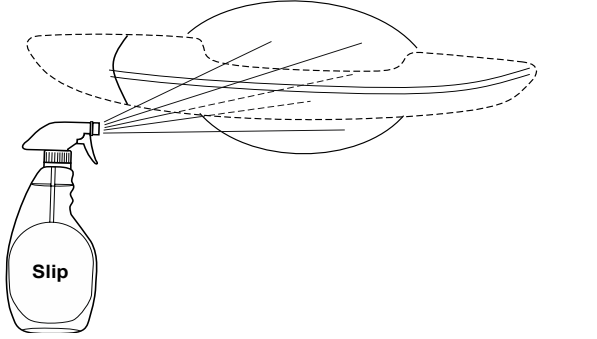
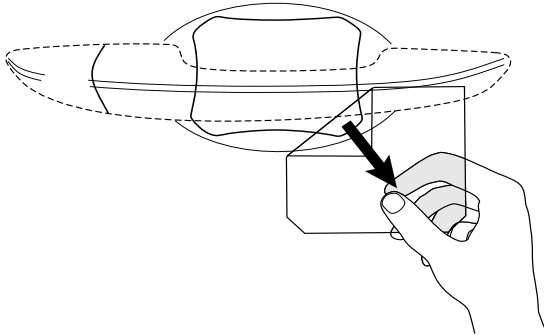



1		50/50 Isopropyl Alcohol (70%) & Water (Cleaning Solution), and a Microfiber Cloth
		
<div style="display: flex; justify-content: space-between; align-items: center;"> <div style="writing-mode: vertical-rl; transform: rotate(180deg); font-weight: bold;">NOTE</div> <div> <p>1. Thoroughly clean the door handle pocket area using cleaning solution and a microfiber cloth.</p> </div> </div>		
<div style="display: flex; justify-content: space-around; align-items: center;">   </div>		
<div style="display: flex; justify-content: space-between; align-items: center;"> <div style="text-align: center;">  </div> <div> <p>Make sure application area is completely clean and dried. Inspect area for contaminants.</p> </div> </div>		

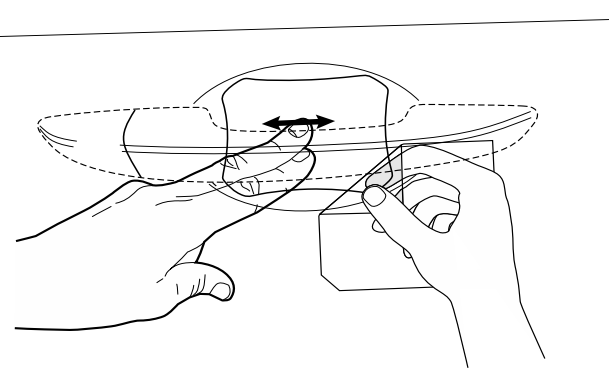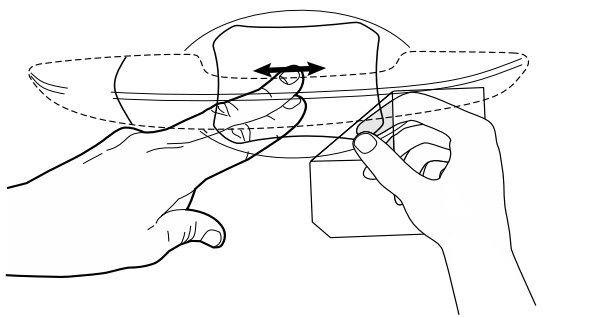
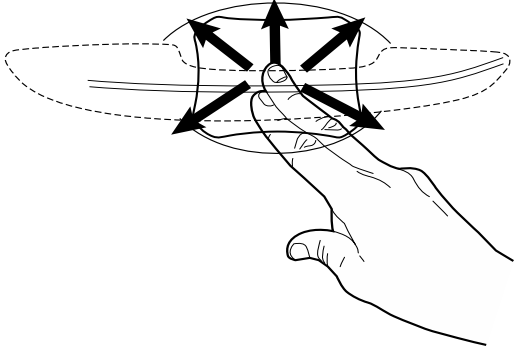
2		Alcohol, Soap & Water Mixture (SLIP Mixture)
		
<div style="display: flex; justify-content: space-between; align-items: center;"> <div style="writing-mode: vertical-rl; transform: rotate(180deg); font-weight: bold;">NOTE</div> <div> <p>1. Prior to installation, wet your hands with the SLIP mixture and ensure your hands stay wet during the installation. 2. Partially peel back the Liner from the Door Handle Pocket Applique, then spray the film with the SLIP mixture.</p> </div> </div>		
<div style="display: flex; justify-content: space-around; align-items: center;">  </div>		
<div style="display: flex; justify-content: space-between; align-items: center;"> <div style="text-align: center;">  </div> <div> <p>Pay special attention not to get any fingerprints or dirt on the adhesive side of the Door Handle Pocket Applique.</p> </div> </div>		

3		Alcohol, Soap & Water Mixture (SLIP Mixture)
		
<div style="display: flex; justify-content: space-between; align-items: center;"> <div style="writing-mode: vertical-rl; transform: rotate(180deg); font-weight: bold;">NOTE</div> <div> <p>1. Spray the door cup area with SLIP mixture as shown.</p> </div> </div>		
<div style="display: flex; justify-content: space-around; align-items: center;">  </div>		
<div style="display: flex; justify-content: space-between; align-items: center;"> <div style="text-align: center;">  </div> <div> <p>Pay special attention not to get any fingerprints or dirt on the adhesive side of the Door Handle Pocket Applique.</p> </div> </div>		

4		
		
<div style="display: flex; justify-content: space-between; align-items: center;"> <div style="writing-mode: vertical-rl; transform: rotate(180deg); font-weight: bold;">NOTE</div> <div> <p>1. Position the Door Handle Pocket Applique under the door handle, making sure it is centered as shown. 2. Apply light pressure to the center of Door Handle Pocket Applique to tack it down.</p> </div> </div>		
<div style="display: flex; justify-content: space-around; align-items: center;">  </div>		
<div style="display: flex; justify-content: space-between; align-items: center;"> <div style="text-align: center;">  </div> <div> <p>Pay special attention not to get any fingerprints or dirt on the adhesive side of the Door Handle Pocket Applique.</p> </div> </div>		






Genuine Accessories

5		
		
 		
NOTE	1. Remove the remaining bottom corner of liner.	
	 Pay special attention not to get any fingerprints or dirt on adhesive side of the Door Handle Pocket Applique.	

6		
		
NOTE	1. Squeegee the Door Handle Pocket Applique from the center out using overlapping strokes with fingers as shown, making sure no air bubbles are trapped under the film.	

Genuine Accessories

Visual Check

Item to be Checked		Result	
	Pay special attention not to get any fingerprints or dirt on the adhesive.	No dirt or fingerprints on Door Handle Pocket Applique.	
	Make sure Door Handle Pocket Applique is fully adhered.	Door Handle Pocket Applique is not lifting and is fully adhered. Take special care to make sure all edges are fully adhered.	
	Make sure no air bubbles are trapped under film.	No air bubbles.	
	Make sure Door Handle Pocket Applique is free of any remaining adhesive after installation. Clean the Door Handle Pocket Applique with soap and water if necessary.	No adhesive remaining on Door Handle Pocket Applique.	
	If an installation error occurs, i.e., scratched / marred Door Handle Pocket Applique, dirt / debris under Door Handle Pocket Applique, crooked installation, etc., installer should remove, discard and replace the Door Handle Pocket Applique.	Door Handle Pocket Applique is installed correctly.	